
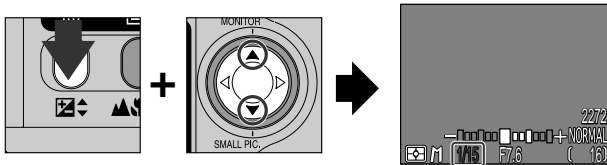



## Choosing a Shutter Speed

In manual exposure mode, shutter speed is chosen by pressing ▲/▼ on the Multi selector while holding down the  button. Options range from 8 sec. to 1/1000 sec. in increments equivalent to 1 EV (one step). In addition, a shutter speed of “BULB” up to 60 sec. is available for long-time exposures.




Press ▲ for slower shutter speeds, ▼ for faster shutter speeds.

In manual exposure mode, the amount the picture would be over- or underexposed at the selected combination of aperture and shutter speed is displayed in the monitor.

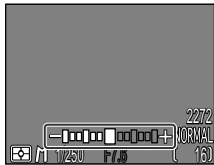


Display shows values between -2 and +2 EV in increments of 1/3 EV.

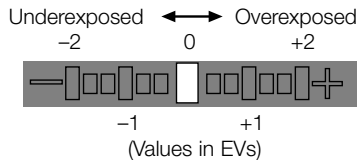


## Long-time exposure (up to 60 sec.)

- When the shutter speed is set to **BULB** (manual exposure mode only), the shutter will remain open while the shutter release button is pressed (maximum exposure 60 sec.). To reduce blurring caused by camera shake, we recommend that you use a remote shutter release (the MC-EU1 Remote Cord, available separately, functions as a remote shutter-release cable) and a tripod.

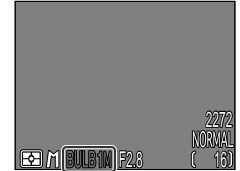

## Shutter speed limitations

- At a **CONTINUOUS** setting of **Ultra HS** (p. 100), the lowest available shutter speed is 1/30 sec. At setting of  movie (p. 50), shutter speed cannot be set to a value slower than 1/15 sec. **BULB** is only available at a setting of **Single** (p. 100).
- Note that if the shutter is open for more than 1/4 sec. at any setting, mottling (noise) may appear in the final picture. At speeds of 1/4 sec. Or slower, the shutter speed indicator in the monitor turns yellow.